


# Reference Guides

## RJ21 Pinouts

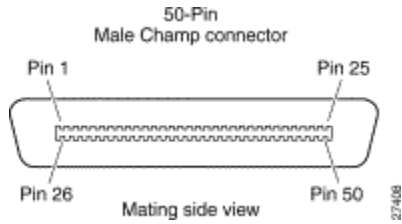

Connector Pinouts		
Circuit	Pin ( Ring )	Pin ( Tip )
FXS 1	1	26
FXS 2	2	27
FXS 3	3	28
FXS 4	4	29
FXS 5	5	30
FXS 6	6	31
FXS 7	7	32
FXS 8	8	33
FXS 9	9	34
FXS 10	10	35
FXS 11	11	36
FXS 12	12	37
FXS 13	13	38
FXS 14	14	39
FXS 15	15	40
FXS 16	16	41

FXS 17	17	42
FXS 18	18	43
FXS 19	19	44
FXS 20	20	45
FXS 21	21	46
FXS 22	22	47
FXS 23	23	48
FXS 24	24	49
Not Used	25	50

#### Cables and Accessories

<a href="#">GrayBar</a> part numbers	Description
PVC-025PC-010	(10 feet male-female RJ21/Telco cable)
PVC-025PP-010	(10 feet male-male RJ21/Telco cable)
AT125-SM	(RJ-21 bridging adapter/break-out box)